

Calibre 3135

Ø28.50mm

Ht: 6.00mm

Train: 28.800

- Automatic
- Calendar
- Centre Seconds
- Shock Proof
- 31 Jewels

Base Calibre 3135

Image	Rolex No.	Description
	4494	Spring for in setting for escape wheel-upper /lower
	5021	Roller
	5044	Stud for minute wheel
	95019-1	Shock-absorber for balance-lower
	95019-2	In setting for balance-upper / lower
	95019-3	Cap jewel for balance-upper / lower
	95019-4	Spring for in setting for balance-upper /lower
	95067	Jewel for: • Reversing wheel-upper /lower • Driving wheel for ratchet wheel-upper

 
 
Image	Rolex No.	Description
	2130-0913-2	Cap jewel for escape wheel- upper /lower
	3135-100	Main plate
	3135-105	Barrel bridge
	3135-110	Train wheel bridge
	3135-115	Pallet bridge
	3135-118	Balance guard
	3135-120	Balance bridge
	3135-125	Minute pinion bridge
	3135-130	Winding bridge
	3135-135	Automatic device lower bridge

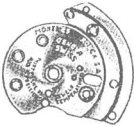
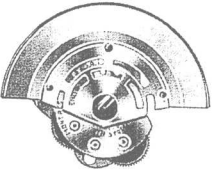
Image	Rolex No.	Description
	3135-140	Automatic device upper bridge
	3135-145	Automatic device module
	3135-201	Winding stem
	3135-204	Winding pinion
	3135-205	Sliding pinion
	3135-210	Crown wheel
	3135-211	Crown wheel core
	3135-212	Core for intermediate crown wheel
	3135-213	Intermediate crown wheel
	3135-217	Yoke for sliding gear
	3135-220	Setting lever
	3135-225	Spring for setting lever

Image	Rolex No.	Description
	3135-230	Jumper for setting lever
	3135-240	Yoke for sliding pinion
	3135-241	Spring for yoke
	3135-245	Spring for balance stop
	3135-250	Setting wheel
	3135-260	Minute wheel
	3135-266	Yoke for setting wheel
	3135-268	Cover mechanism, mounted
	3135-270	Cannon pinion ht. 2.86mm
	3135-280	Hour wheel
	3135-300	Click
	3135-301	Spring for click
	3135-305	Ratchet wheel

 
Image	Rolex No.	Description
	3135-307	Barrel arbor
	3135-310	Barrel with arbor
	3135-311	Mainspring, strength standard
	3135-311-1	Mainspring, strength weak
 	3135-330	Great wheel
	3135-335	Minute pinion with cannon pinion
 	3135-340	Third wheel
 	3135-360	Second wheel
 	3135-410	Escape wheel
	3135-419	Pallet staff
	3135-421	Pallet fork
	3135-429	Balance staff
	3135-432	Balance with Breguet hairspring, timed
	3135-450	Stud support

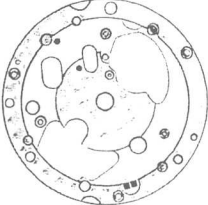
Image	Rolex No.	Description
	3135-451	Bridle for stud support
 	3135-510	Driving wheel for ratchet wheel
 	3135-540	Reversing wheel
	3135-550	Pinion for oscillating weight
	3135-560-1	Spring-clip for oscillating weight: • 0.18mm
	3135-560-2	• 0.165mm
	3135-560-3	• 0.195mm
	3135-561	Bridle for spring-clip
	3135-568	Axle for oscillating weight
	3135-570	Oscillating weight
	3135-600	Date indicator seating

Image	Rolex No.	Description
	3135-614	Date jumper
	3135-623	Finger for date
	3135-625	Date wheel, mounted
	3135-633	Yoke for cam
	3135-635	Spring for cam yoke
	3135-639	Intermediate date corrector wheel
	3135-645	Date corrector
 	3135-670	Intermediate date wheel
	3135-0913	In setting for escape wheel-upper / lower
	3135-0915	Shock-absorber for balance-upper
	3135-0945	Regulating friction for balance bridge

Image	Rolex No.	Description
	3135-5000	Set of screws
	3135-5013	Screw for dial
	3135-5100	Screw for case
	3135-5110	Screw for: • Balance guard • Balance bridge • Winding bridge • Automatic device lower bridge • Automatic device upper bridge • Barrel bridge • Train wheel bridge
	3135-5115	Screw for: • Bridle of spring clip • Bridle for stud holder • Click • Spring for setting lever • Jumper for setting lever • Minute pinion bridge • Pallet bridge • Cover mechanism
	3135-5120	Regulating nut for balance bridge height adjustment
	3135-5210	Screw for: • Crown wheel • Ratchet wheel
	3135-5213	Screw for intermediate crown wheel
	3135-5452	Screw for hairspring bridle

Image	Rolex No.	Description
	3135-5600	Screw for date indicator seating
	3135-5625	Screw for date wheel
	3135-7115	Tapped foot for pallet bridge
	3135-7120	Tapped foot for balance bridge
	3135-7240	Yoke stud
	3135-7625	Tapped foot for date wheel
	3135-7635	Stud for came yoke spring
	3135-9310	Jewel for barrel arbor-upper
	3135-9311	Jewel for barrel arbor-lower
	3135-9319	Bush for minute pinion-lower
	3135-9330	Jewel for great wheel-upper / lower
	3135-9335	In-setting for minute pinion-upper
	3135-9340	Jewel for third wheel-upper / lower
	3135-9360	Jewel for second wheel-upper
	3135-9421	Jewel for pallet fork-upper /lower

Image	Rolex No.	Description
	3135-9510	Jewel for driving wheel for ratchet wheel support
	3135-9511	Jewel for driving wheel for ratchet wheel-lower
	3135-9570	Jewel for oscillating weight-upper
	3135-9571	Jewel for oscillating weight-lower
	3135-9633	Jewel for yoke for cam
	3135-9670	Jewel for intermediate date wheel-upper /lower
	3135-16100	Date indicator, champagne
	3135-16200	silvered